

Version 1, 25 May 2017, Page 1 of 4

Safe-Cell® Manual Prison Tapware

PRODUCT CODES:

50162C - 50169C





SPECIFICATIONS

- Designed for maximum protection against vandalism, Safe-Cell® Mental Health Wall Top Assemblies are made from heavy duty components and are designed to be ligature resistant for added safety.
- The paddle design handle allows the ceramic cartridge to be activated with minimal effort.
- Quarter turn ceramic disc.
- Machined cold or hot identification button.

IMPORTANT: All Safe-Cell® Mental Health Wall Top Assemblies are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

| TECHNICAL DATA | | | |
|-------------------------|------------|--|--|
| nlet | | | |
| Outlet | | | |
| Headwork | | | |
| Min | 50 | | |
| Max | 500 | | |
| Min | 5 | | |
| Max | 75 | | |
| Nominal Flow Rate (LPM) | | | |
| Finish | | | |
| | Max Min | | |

NOTE: Galvin Specialised continually strive to improve their products. Specifications may change without notice.


TOOLS REQUIRED

Spanner and hex key Thread tape


PRE-INSTALLATION

MOUNTING DETAILS

- Measure the depth of the wall cavity that the body will need to be recessed into. If the depth is greater than 10mm then an additional 20mm spindle extension (Item# 50190) will be required. Call 1300 514 074 for more information.
- The thread of the Inwall body assembly thread must be 5/8" BSP female.

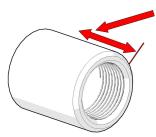



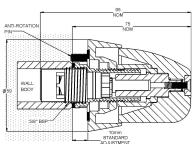

Galvin Engineering Pty Ltd



Version 1, 25 May 2017, Page **2** of **4**


INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.




1. Disassembly

- Disassemble components
- Separate body washer, cartridge and locknut

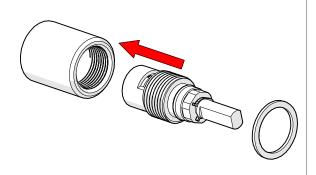


2. Fit cartridge

- Fit ceramic cartridge in to the wall body. Fit body washer
- Do not over tighten and do not use spindle to tighten.

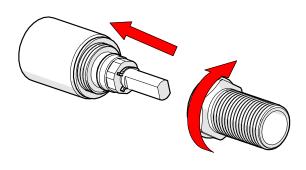

3. Fit locknut

 Fit locknut & tighten onto the cartridge, ensure fiber washer seals, similar tension as conventional jumper valve headpart.

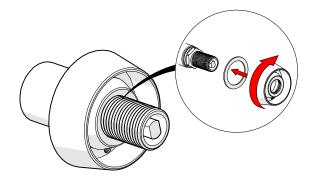

4. Fit dress flange


- Fit dress flange onto locknut and tighten.
- Ensure to use flange washer between wall and flange.



Version 1, 25 May 2017, Page 3 of 4





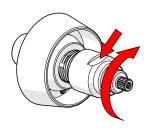



5. Fit dress flange with anti-rotation pin

- If the anti-rotation option is required, fit dress flange onto locknut and mark the wall.
 Remove the flange and drill 3/16" hole 10mm deep.
- Replace the flange and screw in the grub screw to lock.

6. Fit lock sleeve

Fit lock sleeve and tighten to lock entire unit in position.

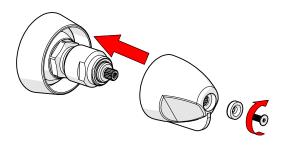

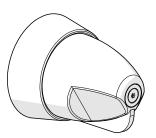

7. Assemble handle

- Fit handle with tamper proof screw, ensure the correct water temperature identification button is in the handle
- Screw must be tightened before the unit is tested

8. Testing

 Once temperature indicator is fitted, check the operation of the unit and inspect for any leaks.

| TROUBLESHOOTING | | |
|-------------------------------|--------------------------------------|---|
| PROBLEM | CAUSE | RECTIFICATION |
| Taps are dripping water | Ceramic cartridge is worn or damaged | Remove and inspect the cartridge, remove debris and/or replace cartridge if damaged |
| Water is not flowing from tap | Water is turned off | Turn on water |



Version 1. 25 May 2017. Page 4 of 4

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

