


CliniLever® Lead Safe™ Hospital Swivel Wall Outlets

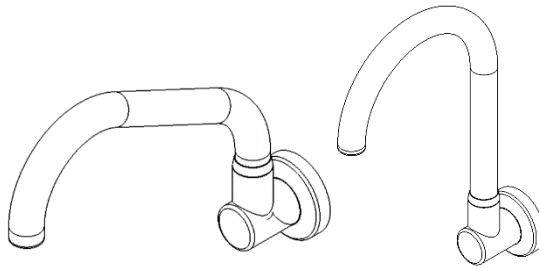

PRODUCTS

Item Code	Description	WELS Rating	Water Consumption	Nominal Flow Rate	Outlet
102.51.01.00	CliniLever® CP-BS Lead Safe™ Gooseneck Wall Swivel Outlet 190 Reach x 165 High Laminar	5	5.5	5.22	Laminar Flow
102.52.01.00	CliniLever® CP-BS Lead Safe™ Hospital Upswept Wall Swivel Outlet 200 Reach x 80 High Laminar	5	5.5	5.08	Laminar Flow
102.51.11.00	CliniLever® CP-BS Lead Safe™ Hospital Gooseneck Wall Swivel Outlet 240 Reach x 145 High Laminar	5	5.5	5.22	Laminar Flow
102.52.11.00	CliniLever® CP-BS Lead Safe™ Hospital Upswept Wall Swivel Outlet 225 Reach x 80 High Laminar	5	6.0	5.6	Laminar Flow
102.51.21.00	CliniLever® CP-BS Lead Safe™ Hospital Gooseneck Wall Swivel Outlet 190 Reach x 225 High Laminar	5	5.5	5.22	Laminar Flow
102.52.21.00	CliniLever® CP-BS Lead Safe™ Hospital Upswept Wall Swivel Outlet 240 Reach x 80 High Laminar	5	5.5	5.15	Laminar Flow

SPECIFICATIONS

- The Clinilever® product range is primarily used for hand washing applications in medical facilities, hospitals, aged care facilities, schools, and in-home care.
- Clinilever® products provide state of the art features to comply with the latest healthcare guidelines.
- Convenient swivel design.
- Robust construction for long life.
- Low maintenance.
- Laminar flow.
- Finished in bright chrome plate for easy cleaning and durability.
- Lead Safe™ brass construction. *

IMPORTANT: All Clinilever® healthcare taps are tested in accordance with AS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

** Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attention to be paid to notes, photos, images, or drawings of assembly steps marked with the warning symbol.



TECHNICAL DATA


Inlet		G ½" - Female
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	65
Construction		Brass
Finish		Chrome

NOTE: Galvin Engineering continually strives to improve their products. Specifications may change without notice.

TOOLS REQUIRED


- Spanner or adjustable crescent
- Thread tape


PRE-INSTALLATION

- Before installation, all lines must be flushed.  Galvin Engineering recommends the installation of strainers and pressure reducing valves (when necessary) to ensure clean consistent supply. Debris or poor water quality could affect the performance of the unit.
- Wall Spud – Wall spud must be 1/2" BSP MI and protrude from the finished wall by no more than 15mm.


Note: In some situations, a male thread connection on the tap may be more suited. If so, please contact us on 1300 514 074

DIMENSIONS

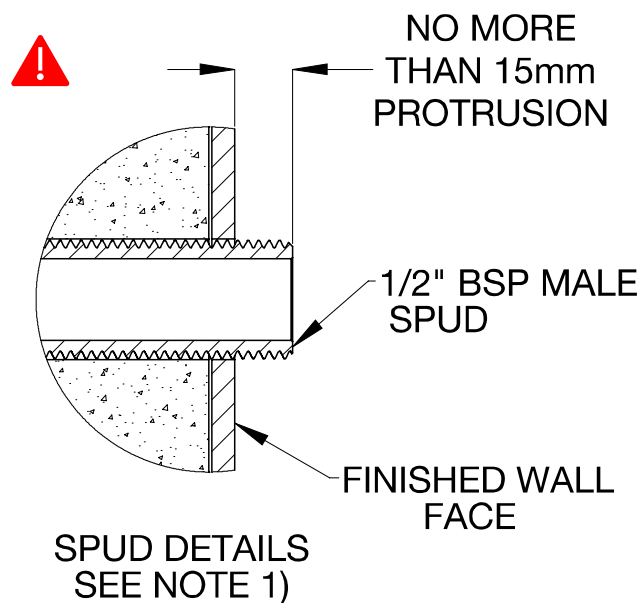


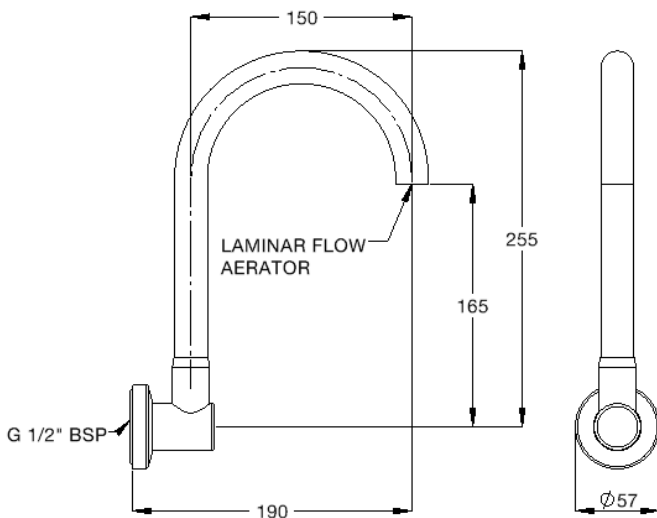


102.51.01.00

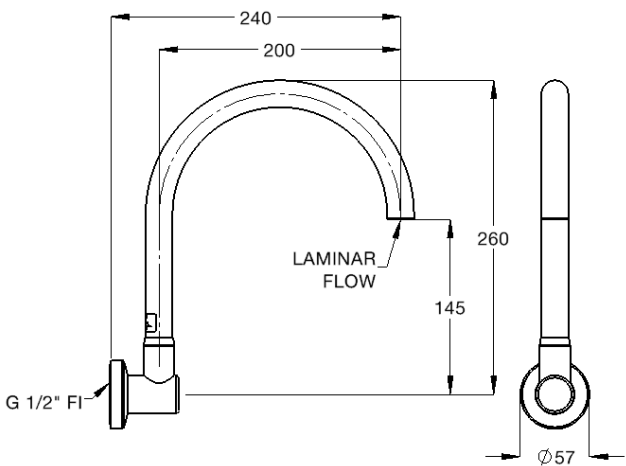


102.51.11.00

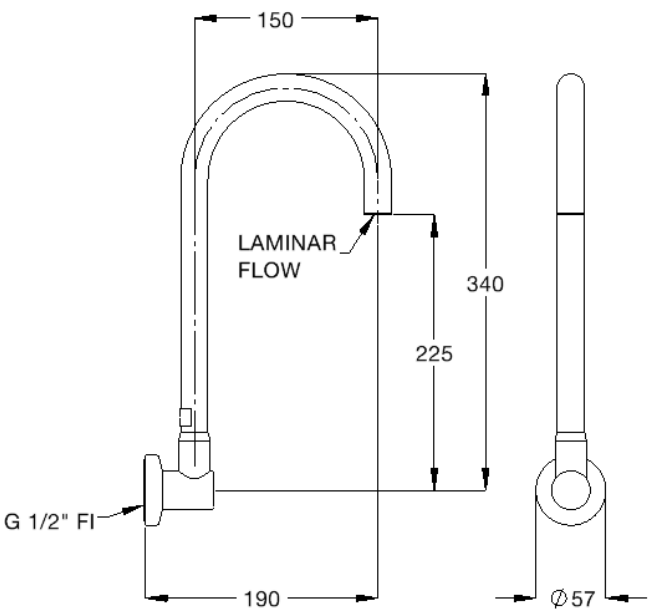


102.51.21.00

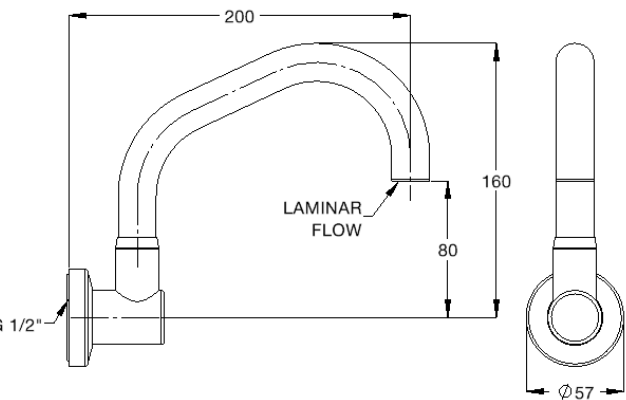

102.52.01.00

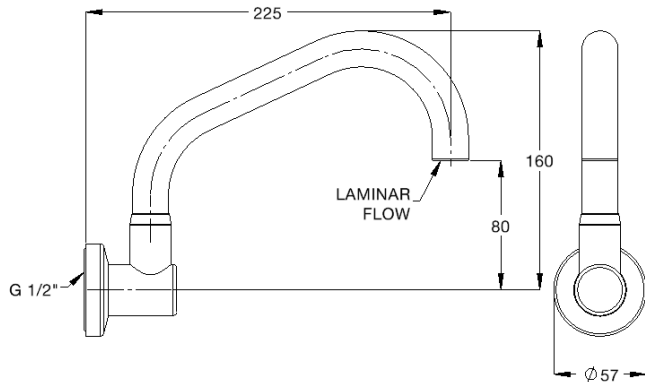


102.52.11.00

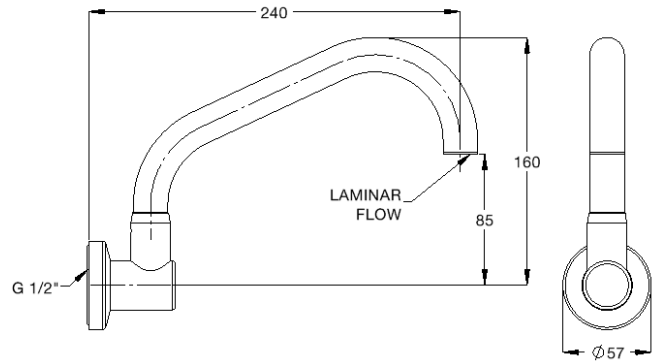

102.52.21.00


INSTALLATION

IMPORTANT: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

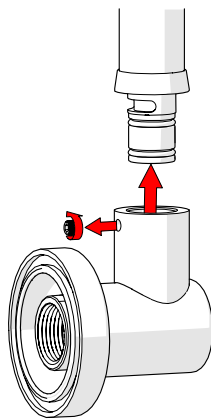


1. Disassembly

- Remove the spout from the wall elbow using a hex key. This is to enable easy installation and prevent the spout being damaged.

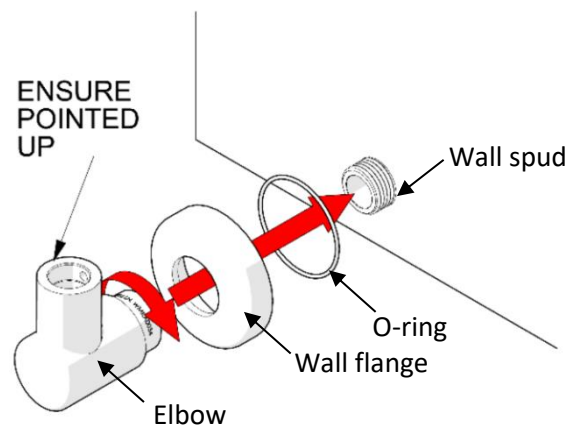

2. Connect


- Place the wall flange over the elbow. Fit the elbow to the protruding wall spud. We recommend using thread tape or an equivalent to ensure the connection does not leak.
- Ensure spout connection is pointing up (vertical).

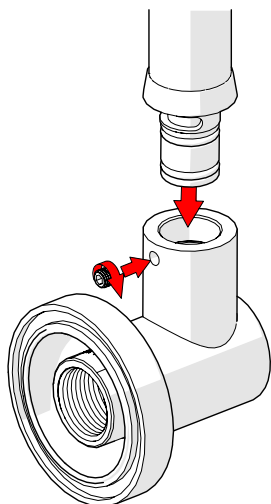

3. Refit the spout

- Refit the spout to the elbow. Tighten the grub screw using a hex key.

Note: Do not overtighten grub screw. Ensure spout swivels freely once installed.

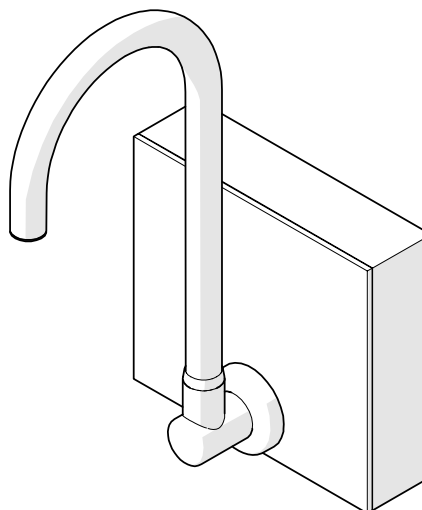

4. Testing

- Turn on the water supply and test for leaks and correct operation.

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Inconsistent flow	Blocked aerator	Remove aerator and clean
	Blocked top assembly	Remove top assembly and clean
Water is not flowing from the tap	Water is turned off	Turn on the water supply
Continuous flow	Top assembly loose or internally obstructed or damaged	Remove top assembly, clean with water, and replace if required

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS/NZS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au

www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

