


Product Installation Guidelines & Scope of Use

Version 1.1, 28 August 2025, Page 1 of 4
Document No.: 170.10.40.00

Vandal Resistant CP Lead Safe™ Bubbler Outlet 15 BSP x 35 mm Long

PRODUCT CODE:

- 170.10.40.00

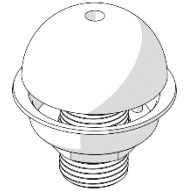

SPECIFICATIONS

- This vandal resistant Drinking/Basin Outlet is made of Lead Safe™ Brass*
- Designed for easy bench installation
- Chrome plated finish dome outlet

IMPORTANT: All Bubbler outlet taps are tested in accordance with AS 3718 and leave our premises in good working order.

IMPORTANT: Flow restriction must be fitted preceding the outlet to adjust the flow rate.

*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.
** Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As per AS 3718.

TECHNICAL DATA



Inlet	½" BSP – Male	
Outlet	Dome Outlet	
Headwork	N/A	
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	60
Nominal Flow Rate (LPM)	N/A	
Finish	Chrome	

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.

PRE-INSTALLATION

MOUNTING DETAILS

- If the mounting holes do not already exist, mark out and drill the holes in the bench/trough, as shown in rough-in dimensions.
- Ensure alignment of 4mm hole is as shown.

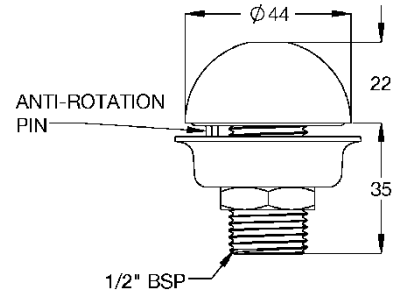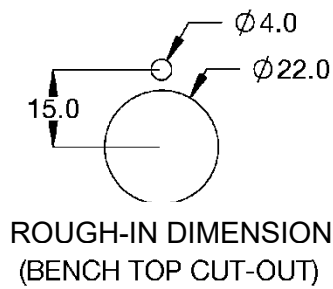


TOOLS REQUIRED

- Power drill
- Spanner or adjustable crescent


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

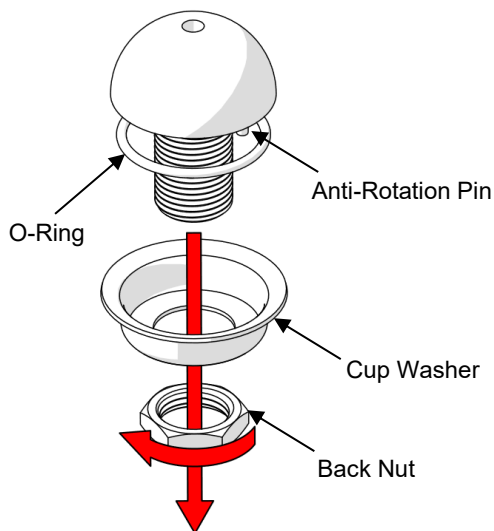


1. Disassemble Outlet Assembly

- Disassemble outlet assembly as shown.

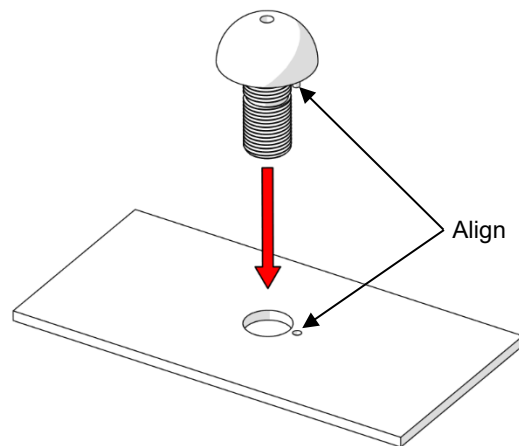


2. Fit Outlet Assembly

- Fit outlet assembly in bench/trough ensuring the rough-in dimensions are followed.
- Ensure anti-rotation pin is aligned with the 4mm hole as shown.

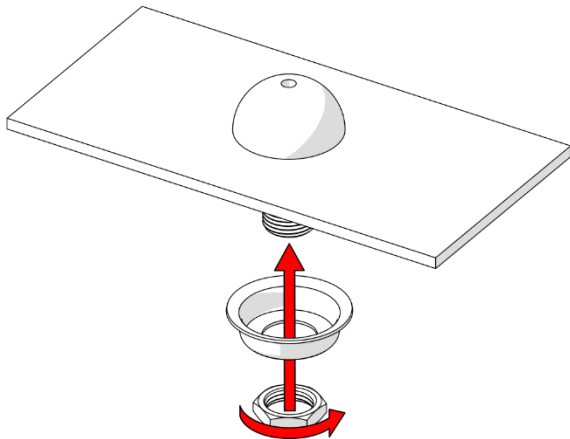

3. Secure Outlet

- Ensure the o-ring is in position before securing the outlet.
- Secure the outlet underneath using the cup washer and back nut as shown.
- Take care not to overtighten.

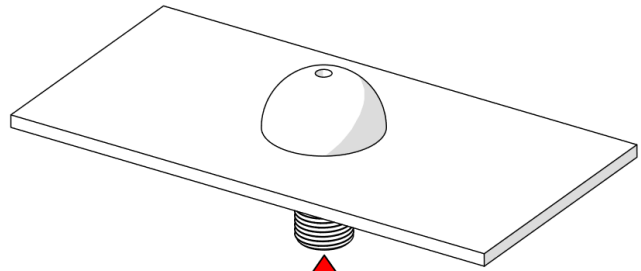

Water In

4. Connect Water & Test

- Connect mains water ensuring thread tape/sealant is used.
- Turn on mains and check for leaks and correct operation.

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Outlet not flush with surface	O-ring not installed correctly	Follow the instructions above when installing.
Outlet rotating	Anti-rotation pin not in correct position	Follow the rough-in dimensions and instructions above when installing.
Leaking	Thread tape/sealant not used	Ensure thread tape/sealant is used when connecting mains water.
Water not flowing from tap	Water not turned on	Turn on water

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS/NZS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: **1300 514 074** Outside Australia: P: **+61 (0)8 9338 2344**

F: **+61 (0)8 9338 2340**

sales@galvinengineering.com.au

www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

