

## Product Installation Guidelines


Version 0, 23 September 2022, Page 1 of 4

# Vandal Resistant CP Lead Safe™ J/V Wall Top Assembly Cold

#### **PRODUCT CODES**

- 174.01.02.01



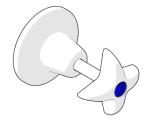

#### **SPECIFICATIONS**

- Chrome plate finish for easy cleaning and durability.
- Simple servicing and readily available parts.
- Tough vandal resistant handle that has a unique locking system.
- Quality controlled. Every tap is tested.
- Lead Safe<sup>™</sup> brass construction\*

**IMPORTANT**: All Vandal Resistant Jumper valve taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

\*As 'lead free' is not currently defined by law in Australia and New Zealand, we have based our definition of Lead Safe™ on the requirements of s1417 of the USA's Safe Drinking Water Act (SDWA) and the relevant US standards NSF61 / NSF372. The SDWA defines 'lead free' as "not more than a weighted average of 0.25% lead when used with respect to the wetted surface of pipes, pipe fittings, plumbing fittings and fixtures".

| TECHNICAL DATA  |     |                 |  |
|---|-----|-----------------|--|
| Inlet   |     | ⁵⁄s" BSP - Male |  |
| Outlet  |     | N/A             |  |
| Headwork  |     | Jumper Valve    |  |
| Working Pressure Range (kPa)  | Min | 50              |  |
|   | Max | 500             |  |
| Working Temperature Range (°C)  | Min | 5               |  |
|   | Max | 60              |  |
| Nominal Flow Rate (LPM)   |     | N/A             |  |
| Construction  |     | Brass           |  |
| Finish  |     | Chrome          |  |
| <b>NOTE:</b> Galvin Engineering continually strive to improve their products. Specifications may change without notice. |     |                 |  |


## **TOOLS REQUIRED**

- Spanner or adjustable crescent
- Key Spanner (supplied)

#### **PRE-INSTALLATION**


## **DIMENSIONS**

Note: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to drinking taps to eliminate any foreign material.

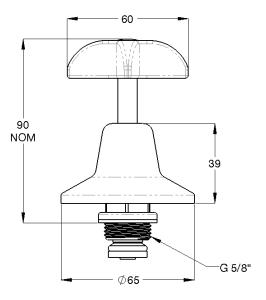


#### **INSTALLATION**

**IMPORTANT:** Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

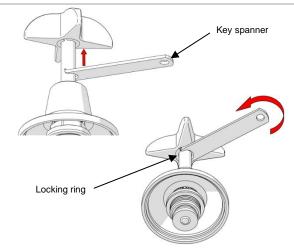


#### 1. Remove locking ring

 Using supplied key spanner, unscrew the handle assembly locking ring as shown.

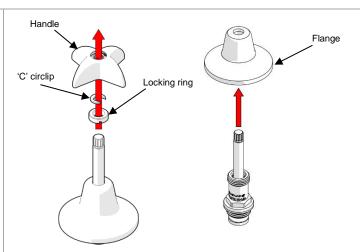


#### 2. Disassemble

- Remove the handle, then 'C' circlip and locking ring.
- Unscrew the flange.

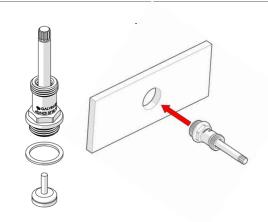


### 3. Fit top assembly

 Fit top assembly ensuring the tap washer and jumper valve is in place.

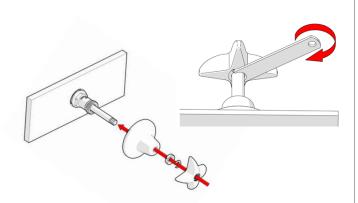

#### 4. Re-assemble

 Fit the assembly components by reversing steps 2 & 1 as shown.

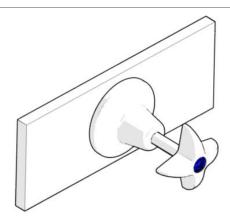

#### 5. Testing

Once the assembly has been installed, test for leaks and correct operation.

| TROUBLESHOOTING               |   |   |
|-------------------------------|---|---|
| PROBLEM                       | CAUSE                                     | RECTIFICATION   |
| Water is not flowing from tap | Water supply is turned off                | Turn on water supply  |
| Assembly is leaking           | The supplied tap washer wasn't installed. | Repeat installation steps ensuring the tap washer is correctly in place |
| Tap is leaking                | Worn jumper valve.                        | Remove the top assembly and replace the jumper valve                    |

#### WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE



