

CP-BS Wall/Pillar/Bib/Basin SBA

PRODUCT CODES:

- 32728 (BS Capstan SBA)
- 48751 (BS Stirling SBA)
- 50015 (Vandal Resistant CP-BS SBA)
- 35793 (Ezy-Twist CP-BS SBA)



SPECIFICATIONS

- The main body is made of solid dezincification resistant (DR) brass rod, with a DR brass fixed outlet.

IMPORTANT: All taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

TECHNICAL DATA

Inlet	G 5/8" BSP	
Outlet	N/A	
Headwork	32728	Ceramic Disc
	48751, 50015	Jumper Valve
	35793	Cam Action
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature (°C)	Min	5
	Max	80
Nominal Flow Rate (LPM)	N/A	
Finish	Brass	

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.

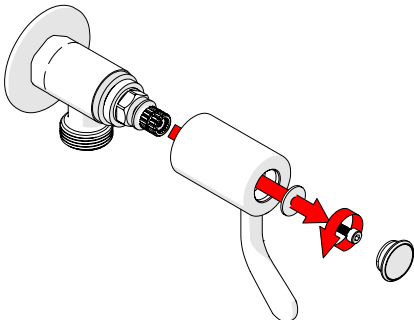
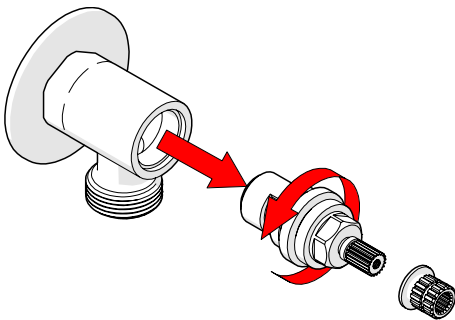
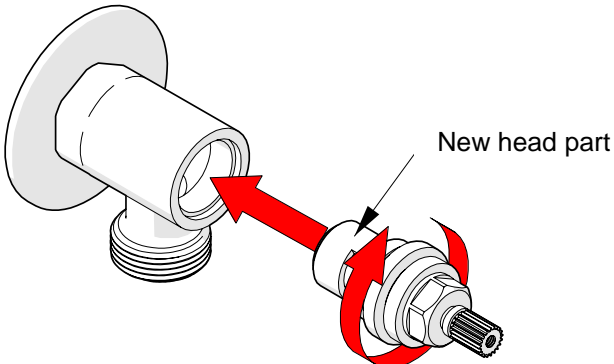
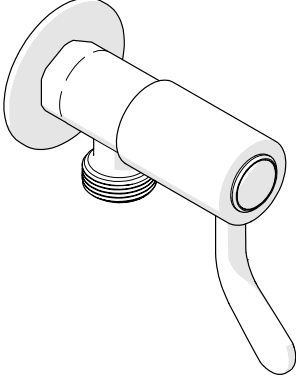
TOOLS REQUIRED

- Spanner and hex key
- Thread tape

INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

Note: (Illustrations are for representation of installation only and is not limited for use to these components)

	
<p>1. Remove Handle</p> <ul style="list-style-type: none"> - Prior to installation turn off the water supply. - Remove the handle assembly. To prevent damage, carefully pry off plastic indicator from the handle. (Use a small flat bladed screwdriver if necessary). 	<p>2. Replace spindle assembly</p> <ul style="list-style-type: none"> - Unscrew the head part from the threaded sleeve using a 17mm spanner. - Check seat inside tap body for pitting or damage. Re-seat if necessary
 <p>New head part</p>	
<p>3. Refit new head part</p> <ul style="list-style-type: none"> - Refit new head part into tap body. <p>Note: do not tighten cartridge using the handle as this will result in damage to the cartridge</p>	<p>4. Reassemble Handle</p> <ul style="list-style-type: none"> - Refit adaptor and reassemble handle by reversing step 1. - When installation is complete, slowly open water supply and inspect for leaks.

TROUBLESHOOTING		
PROBLEM	CAUSE	RECTIFICATION
Taps are dripping water	Ceramic discs are worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.
	Tap seat is damaged	Refurbish tap seat using a reseating tool.
Water is not flowing from tap	Water is turned off	Turn on water
	Ceramic discs are worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.
Spindle is difficult to turn	Ceramic discs are worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.
Handle is loose	Screw has come loose	Tighten handle screw

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au. Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au

www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

