




Ezy-Drink[®] SS Lead Safe Wall Mounted Lever Action Bottle Filler

PRODUCT CODES:

- 34990X

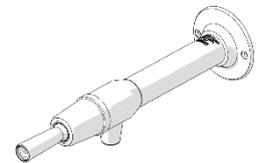

SPECIFICATIONS

- Bottle filler taps are designed to operate at full mains pressure.
- Lead Safe stainless steel construction
- Adjustable built-in flow restrictor.

IMPORTANT: All Ezy-Drink[®] lever bottle filler taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

TECHNICAL DATA

Inlet	1/2" BSP - Female	
Outlet	Water diffuser	
Headwork	Lever action	
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	60
Nominal Flow Rate (LPM)	1.7	
Finish	Stainless Steel	
NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.		

TOOLS REQUIRED


- Power drill
- Spanner or adjustable crescent
- Screw driver



PRE-INSTALLATION

MOUNTING DETAILS – HOLE CENTRES




- If the mounting holes do not already exist, mark out and drill the holes in the wall/sheet, as shown in rough-in dimensions.
Note: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to drinking taps to eliminate any foreign material.

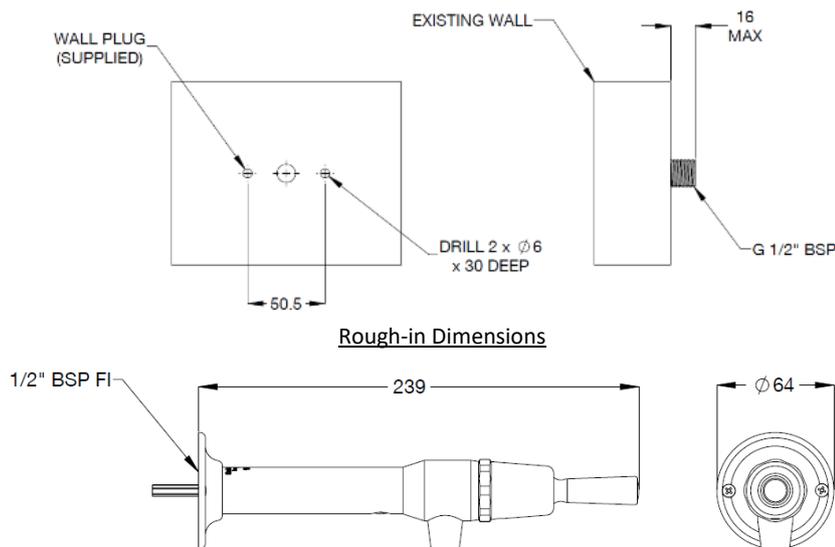

INSTALLATION

IMPORTANT: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

⚠ When applying thread tape or sealant to the inlet, ensure the opening is not blocked. Failure to do so may cause the regulating screw to be blocked, which will affect the flow of water.

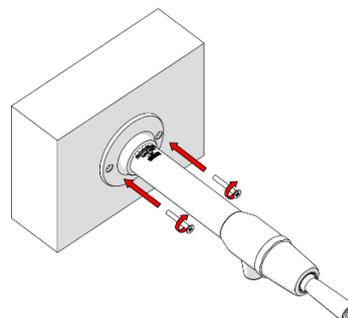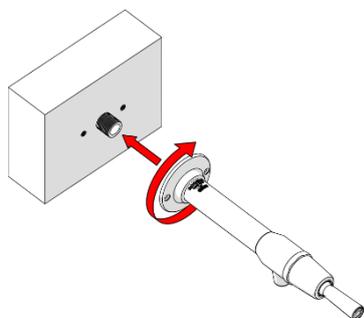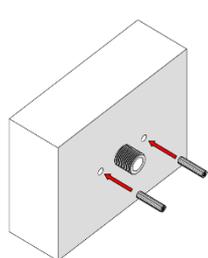


1. Fit tap assembly

- Follow the rough in dimensions above and ensure the orientation of the mounting holes is as shown.
- Fit supplied wall plugs.
- Screw bottle filler assembly clockwise on wall spud until it is in the correct position. Ensure thread tape is used.

2. Secure the body

- Secure the body with supplied screws.

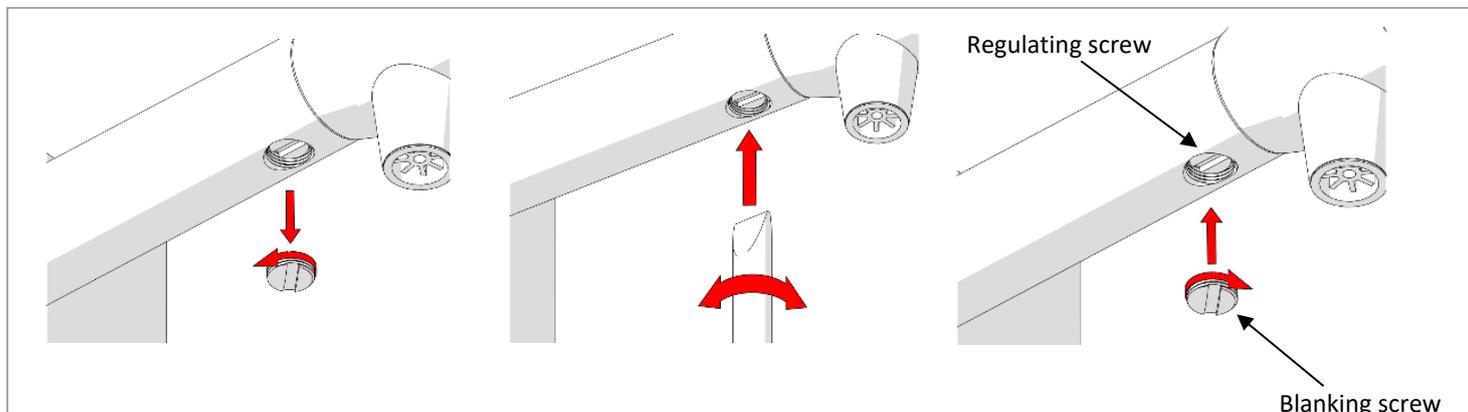

3. Testing

- Once the bottle filler tap has been installed and tested for leaks
- To adjust water flow (if required)
 1. Remove the blanking screw. Located as shown.
 2. Using a screwdriver, adjust the water height by turning the regulator screw as shown
 3. Replace blanking screw

Note: The full range from minimum flow to maximum flow is only ¼ turn

TROUBLESHOOTING		
PROBLEM	CAUSE	RECTIFICATION
Inconsistent flow	Blocked top assembly or regulating screw	Remove top assembly and/or regulating screw and clean
Water is not flowing from tap	Water is turned off	Turn on water
	Blocked regulating screw	Remove regulating screw and clean
Continuous flow	Top assembly loose or internally obstructed or damaged	Remove top assembly, clean with water and re-grease spindle if required
Rate of flow inadequate	The flow regulator screw may not be adjusted correctly	Remove blanking screw and adjust flow regulating screw as described



WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

