


Ezy-Push® CP-BS Push Button Standard Wall Top Assembly

PRODUCT CODES:

- 35436
- 35444

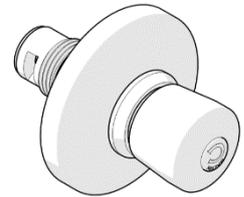

SPECIFICATIONS

- Easy to maintain.
- Vandal Resistant push button design.
- Chrome plate finish for easy cleaning and added durability

IMPORTANT: The push button has only two modes. Fully open or closed. Therefore, flow restriction must be fitted preceding the valve bodies to adjust the flow rate to the desired level.

IMPORTANT: All Ezy-Drink® remote top assemblies are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

TECHNICAL DATA

| | | |
|--------------------------------|-------------------|-----|
| Inlet | G 5/8" BSP - Male | |
| Outlet | N/A | |
| Headwork | Push Button | |
| Working Pressure Range (kPa) | Min | 50 |
| | Max | 500 |
| Working Temperature Range (°C) | Min | 5 |
| | Max | 60 |
| Nominal Flow Rate (LPM) | N/A | |
| Finish | Chrome | |


NOTE: Galvin Specialised continually strive to improve their products. Specifications may change without notice.

TOOLS REQUIRED

- Spanner or adjustable crescent
- Screwdriver
- Hex key (supplied)


PRE-INSTALLATION

NOTE: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to Push Button Tapware to eliminate any foreign material.

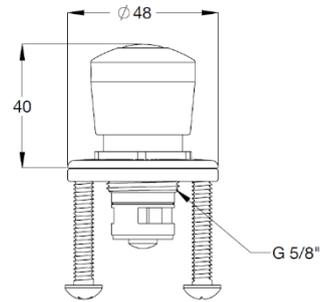


INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

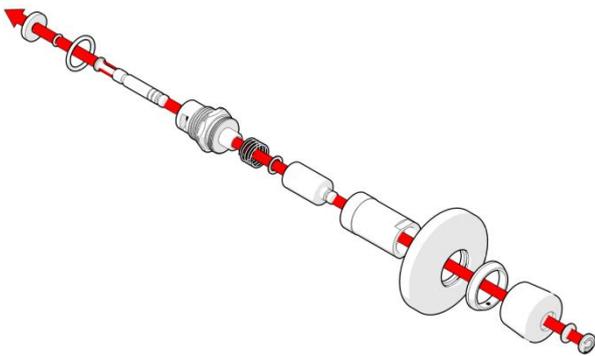


1. Fit Top Assembly

- Disassemble existing push button assembly
- Ensure the inlet body is secure as it will lose its support once the push button assembly has been removed.
- Remove existing push button assembly from the inlet body.
- Check & clean the inlet prior to fitting the replacement assembly.
- Fit new push button assembly as shown.

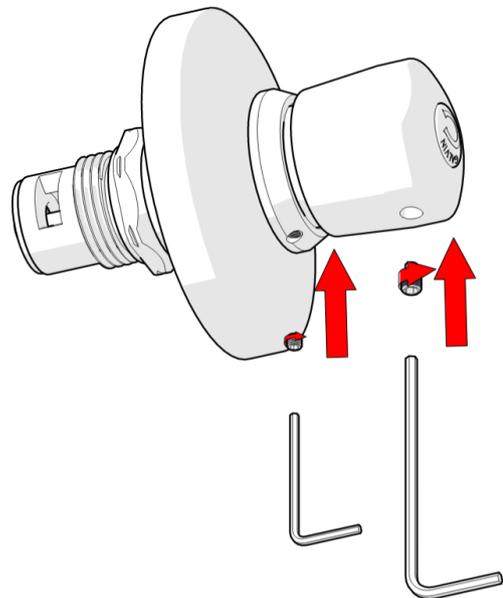

2. Secure Flange Ring and Push Button

- Secure flange ring and push button with grub screws using the supplied Hex key

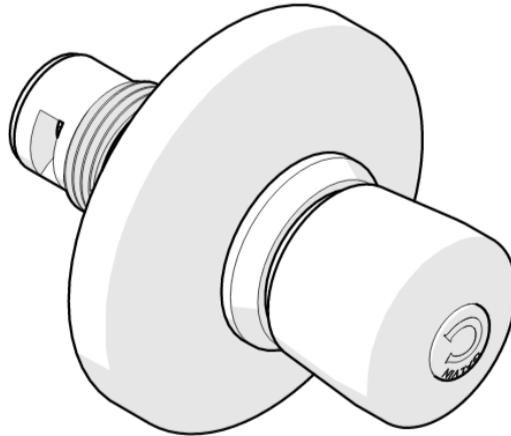

3. Testing

- Once fitted, check installation for leaks and correct operation.

| TROUBLESHOOTING | | |
|-------------------------------|--|---|
| PROBLEM | CAUSE | RECTIFICATION |
| Inconsistent flow | Blocked top assembly | Remove top assembly and clean |
| Water is not flowing from tap | Water is turned off | Turn on water |
| Continuous flow | Top assembly loose or internally obstructed or damaged | Remove top assembly, clean with water and re-grease spindle if required |
| Button hard to press | The mains pressure may be too great | Reduce to below 500kPa (70PSI). Re-grease spindle if required |

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.