


Product Installation Guidelines & Scope of Use

Version 2, 16 April 2025, Page 1 of 4 Document No.: 102.23.11.00

CliniLever[®] CP-BS Lead Safe[™] Hospital Wall Mixing Set Type 56 Fixed 150 J/V

PRODUCT CODE:

- 102.23.11.00

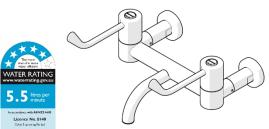

SPECIFICATIONS

- The Galvin Engineering CliniLever[®] product range is primarily used for hand washing applications in medical facilities, hospitals, aged care facilities, schools and in-home care.
- CliniLever® products provide state of the art features to comply with the latest healthcare guidelines.
- The dual levers for on/off, hot and cold temperature have a straightforward operation which simplifies hand washing.
- All CliniLever® products are laminar flow (not aerated).
- Our highly sought-after lever handle design is easily operated with elbows or wrists to avoid hand contact.
- The main body is made of solid dezincification resistant (DR) brass rod, with a DR brass gooseneck outlet.
- Quick action SBA's includes brass jumper valve component, with red and blue indicator button on 150mm lever action handles.
- Lead Safe[™] brass construction*

IMPORTANT: All CliniLever[®] healthcare taps are tested in accordance with AS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372. ** Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.


TECHNICAL DATA

Inlet		G ½" – Female		
Outlet		Laminar Flow		
Headwork	Jumper Valve			
Warking Drassure Dange (UDe)	Min	50		
Working Pressure Range (kPa)	Max	500		
Warking Temperature Dange (%C)	Min	5		
Working Temperature Range (°C)	Max	65		
Nominal Flow Rate (LPM)		5.18		
Finish		Chrome		
NOTE: Calvin Engineering continually atrive to improve their products. Specifications may change without paties				

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.


TOOLS REQUIRED			
 Adjustable wrench 	 Hex key 	 Power drill 	 Thread tape

Product Installation Guidelines & Scope of Use

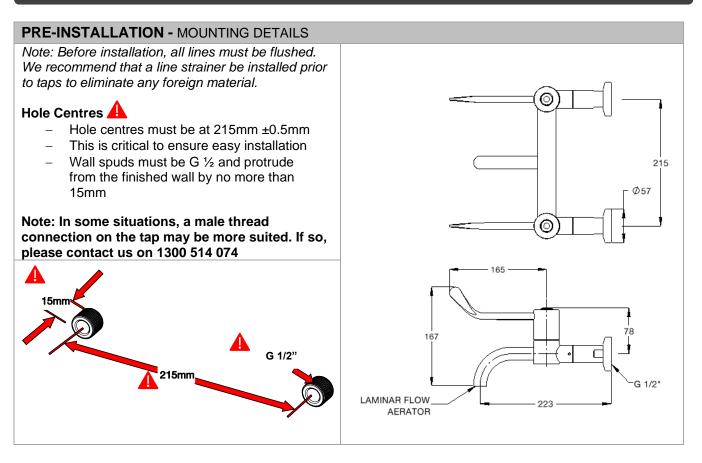


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

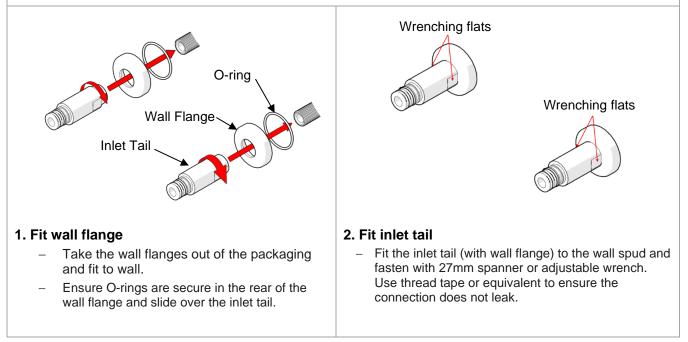


Product Installation Guidelines & Scope of Use

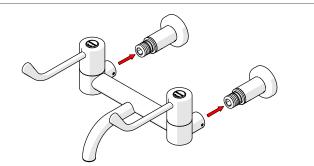

3. Fit assembly body

- Check inlet tail to ensure O-rings are fitted correctly and are in good condition.
- Fit the assembly body onto the inlet tails until it sits flush against them, taking care not to damage the O-rings.

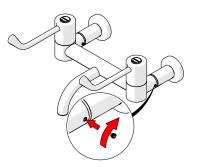

4. Fit grub screws and test

- Ensure the assembly body is pushed firmly against the inlet tail and then secure in place with the supplied grub screws. ENSURE ALL FOUR (4) GRUB SCREWS ARE FITTED WITH THE SUPPLIED ALLEN KEY. If grub screws are missing, contact us on 1300 514 074.
- Once grub screws are secure, turn on mains water. Open the lever handles and ensure there is flow from both hot and cold inlets. Inspect the tap and check for any leaks.

TROUBLESHOOTING				
PROBLEM	CAUSE	RECTIFICATION		
Taps are dripping water	Jumper valves are worn or damaged	Replace jumper valve		
	Tap seat is damaged	Refurbish tap seat using a reseating tool.		
Water is leaking from spindle	O-ring on jumper valve spindle is damaged or worn	Replace o-ring		
Water is not flowing from tap	Water is turned off	Turn water on		
	Aerator or flow regulator is blocked by debris	Remove aerator and/or flow regulator from tap and remove debris. Install an inline strainer.		
Spindle is difficult to turn (jumper valve)	Build up of scale on spindle, spindle worn or o-ring has been damaged	Remove jumper valve, clean and regrease. Replace o-ring. Complete SBA may need to be replaced.		
Handle is loose	Screw has come loose	Tighten handle screw		

SERVICE AND MAINTENANCE

- 1. Turn off the water supply and turn on the tap handle to drain water from the bodies.
- 2. Remove the temperature indicator from the handle.
- 3. Remove the handle from the tap.
- 4. Unscrew the top assembly from the body.
- 5. Check the o-ring on the spindle and the jumper valve for wear and damage. Replace if required.
- 6. Clean the spindle and body of debris.
- 7. Place a new o-ring (if required) onto the spindle and re-grease with potable water approved grease.
- 8. Re-assemble top assembly. Follow the product installation guidelines for the relevant product to reassembly method.

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344 F: +61 (0)8 9338 2340 sales@galvinengineering.com.au www.galvinengineering.com.au ABN: 78 008 719 382 PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE

