


Product Installation Guidelines and Scope of Use

Version 1.0, 17th March 2025 Page 1 of 3
Document No: 110.40.00.00

GalvinAssist® CP Lead Safe™ Underslung Wall Swivel Outlet 200mm

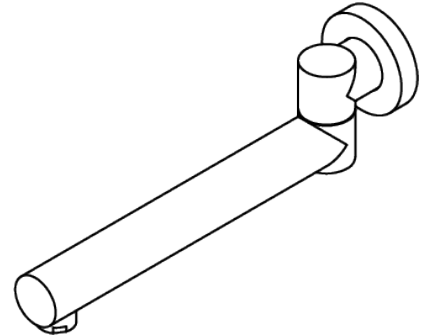

PRODUCT CODE:

110.40.00.00 - GalvinAssist® CP Lead Safe™ Underslung Wall Swivel Outlet 200mm

SPECIFICATIONS

- Chrome plate for easy cleaning and durability.
- Simple servicing and readily available parts.
- Quality controlled. Every tap is tested.
- Lead Safe™ brass construction*.

IMPORTANT:

*Our Lead Safe™ product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ASNI 372.

** Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.




TECHNICAL DATA

Inlet	1/2" BSP – Female	
Outlet	Aerated	
Headworks	N/A	
Working Pressure Range (kPa)	Min	150
	Max	500
Working Temperature Range (°C)	Min	5
	Max	60
Nominal Flow Rate (LPM)	4.76 LPM	
Construction	Lead Free Brass	
Finish	Chrome	

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice

DIMENSIONS

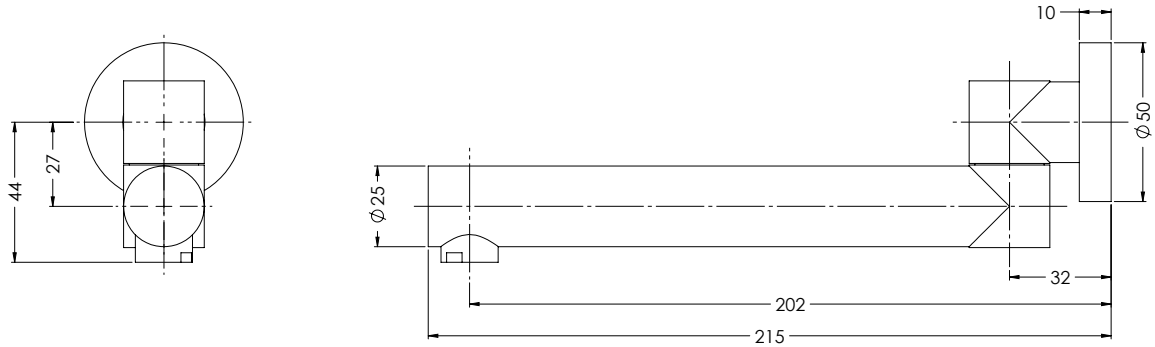


110.40.00.00

Underslung Wall Swivel Outlet 200mm


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

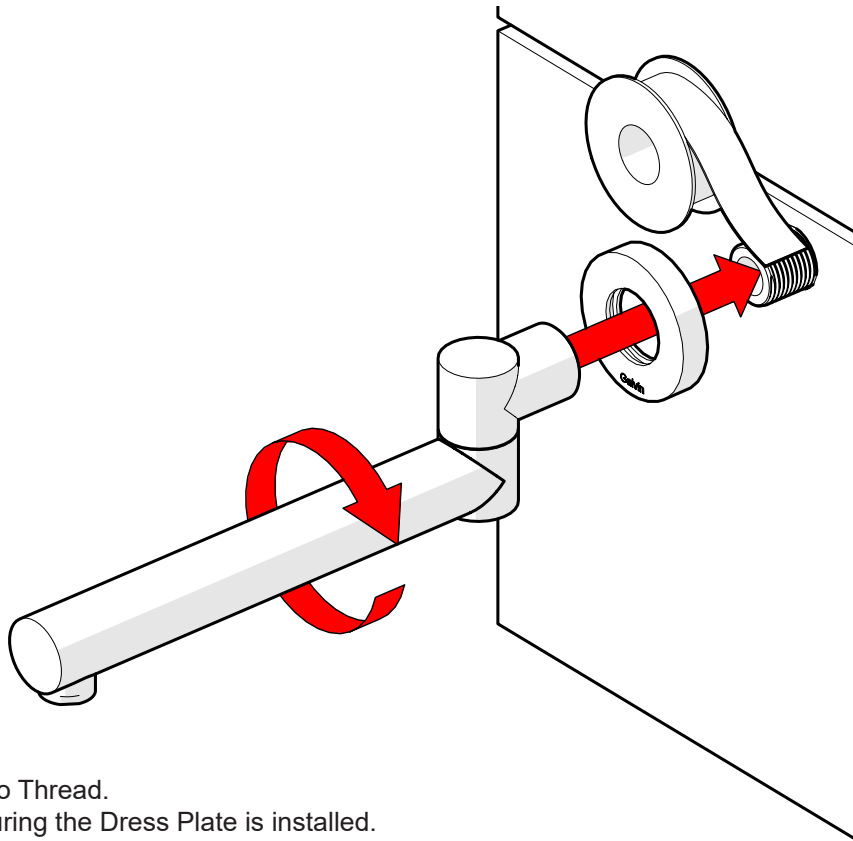

1.
 - Apply Teflon Tape to Thread.
 - Tighten Outlet ensuring the Dress Plate is installed.
- Test and check for Leaks

REMOVE & INSPECT FLOW REGULATING AERATOR

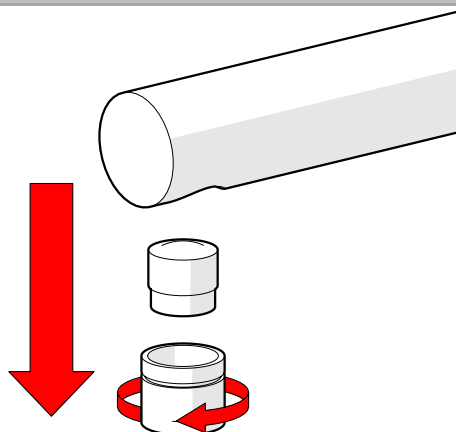

1.
 - Using a Spanner unscrew Aerator Retainer.
 - Push out Aerator and inspect and clean.
 - Reverse previous steps to reinstall.

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Tap is leaking	Tap incorrectly installed	Follow the installation steps above when fitting the tap.
Tap has inconsistent flow	Blocked flow regulator	Follow the instructions above to remove flow regulator from the body and check for debris. Install an inline strainer to stop further blockages.
Tap moves on basin	Insufficiently tightened	Follow the steps above in relation to tightening the installation.

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.