


Product Installation Guidelines & Scope of Use

Version 1, 27 May 2025, Page 1 of 3
Document No.: 13284LF

CP-BS Lead Safe™ Key Control Hose Tap 12 (15 BSP) Less Key

PRODUCT CODES:

- 13284LF

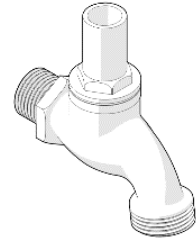

SPECIFICATIONS

- High quality chrome finish for easy cleaning and hygiene maintenance.
- Double O-ring spindle
- Vandal resistant
- Lead Safe™ brass construction.*

IMPORTANT: All taps are tested in accordance with AS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

**Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.



TECHNICAL DATA

Inlet	R ½" – Male	
Outlet	G ¾" – Male	
Headwork	Jumper Valve	
Working Pressure Range (kPa)	Min	100
	Max	500
Working Temperature Range (°C)	Min	5
	Max	75
Finish	Chrome	

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.


TOOLS REQUIRED

- Spanner or adjustable crescent

PRE-INSTALLATION


- Before installation, all lines must be flushed.
- Galvin Engineering recommends the installation of strainers and pressure reducing valves (when necessary) to ensure clean consistent supply. Debris or poor water quality could affect the performance of the unit.

DIMENSIONS

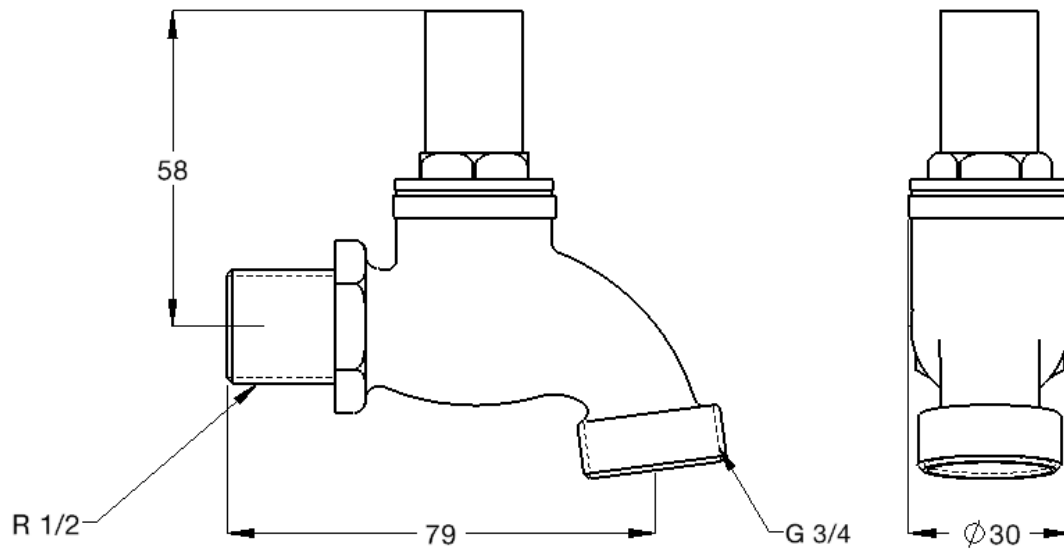


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

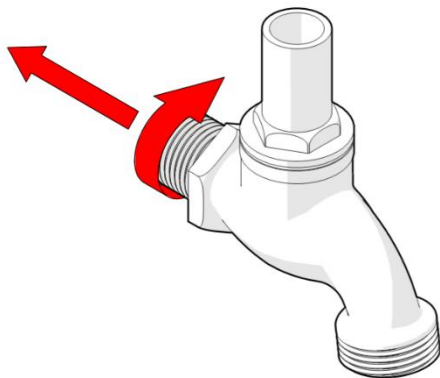

1. Fit tap assembly

- Fit tap assembly as shown ensuring thread tape/sealant is used.

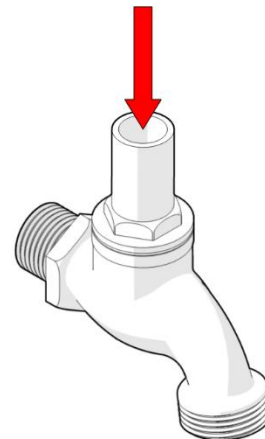

2. Insert Key

- Insert key control (not supplied) for tap operation
- Once fitted turn on water and check for leaks and correct operation.

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Taps are dripping water	Jumper valves are worn or damaged	Replace jumper valve
	Tap seat is damaged	Refurbish tap seat using a reseating tool.
Water is leaking from spindle	O-ring on jumper valve spindle is damaged or worn	Replace o-ring
Water is not flowing from tap	Water supply is turned off	Turn on water supply
	Jumper Valve is worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.
Spindle is difficult to turn	Jumper Valve is worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.
	Build up of scale on spindle, spindle worn or O-ring has been damaged	Remove jumper valve, clean and regrease. Replace O-ring. Complete SBA may need to be replaced.
Continuous flow of water	Top assembly cartridge loose or internally obstructed or damaged	Remove cartridge, clean with water and re-grease spindle if required

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.