


Product Installation Guidelines & Scope of Use

Version 1, 29 July 2025, Page 1 of 6
Document No.: 167.54.32.00

CP-BS Lead Safe™ Lever Action Surgical Bench Mtd Fixed J/V #8 Aerator

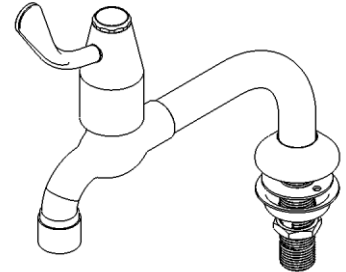

PRODUCTS

Item Code	Description	WELS Rating	Water Consumption	Nominal Flow Rate	Outlet
167.54.32.00	Lever Action CP-BS Lead Safe™ Surg Bench Mounted Type 54 DPW Fixed J/V #8 Aerator	5	6.0	5.55	Aerator

SPECIFICATIONS

- Chrome plate finish for easy cleaning and durability.
- Replaceable top assemblies are supplied for easy maintenance.
- Simple servicing and readily available parts.
- Quality controlled. Every tap is tested.
- Lead Safe™ brass construction*.

IMPORTANT: All laboratory taps are tested in accordance with AS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

**Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attention to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.




TECHNICAL DATA

Inlet		G ½" - Male
Headworks		Jumper Valve
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	65
Construction		Brass
Finish		Chrome
NOTE: Galvin Engineering continually strives to improve their products. Specifications may change without notice		

TOOLS REQUIRED

– Power drill	– Spanner or adjustable crescent	– Thread tape / sealant
---------------	----------------------------------	-------------------------


DIMENSIONS

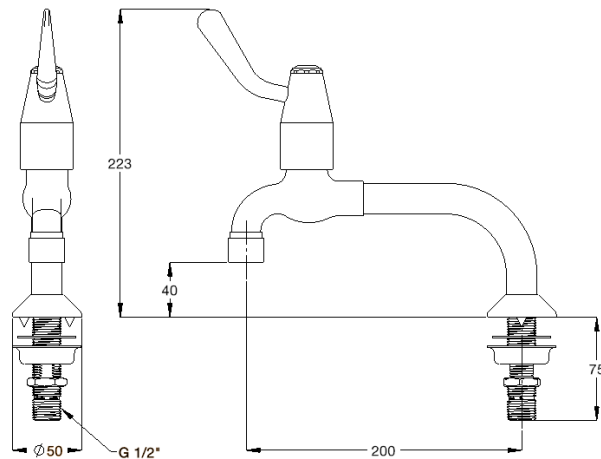

167.54.32.00

PRE-INSTALLATION


- Before installation, all lines must be flushed.
- Galvin Engineering recommends the installation of strainers and pressure reducing valves (when necessary) to ensure clean consistent supply. Debris or poor water quality could affect the performance of the unit.
- If the product includes anti-rotation pins, follow the rough in dimensions below for hole positions & sizes.
- If the mounting hole does not already exist, mark out and drill the holes on the bench, as shown in rough-in dimensions.

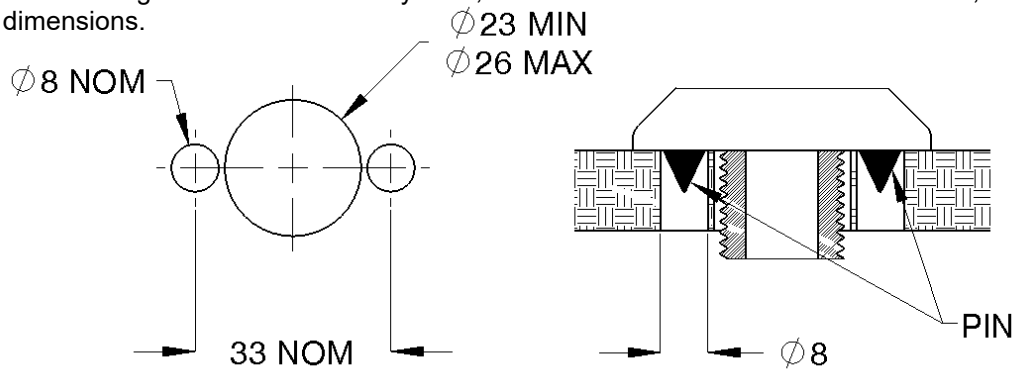

ROUGH-IN DIMENSIONS


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

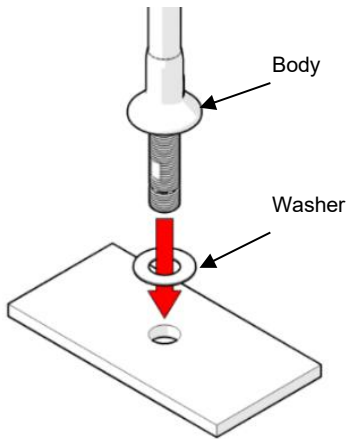


1. Fit lab set body

- Fit the lab set into the bench.
- Fit the rubber washer underneath the stem.

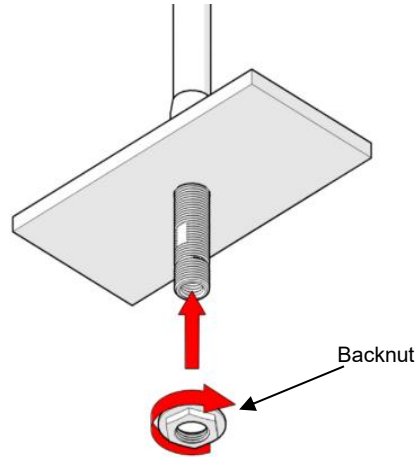


2. Secure the body

- Secure the body underneath with the supplied backnut.

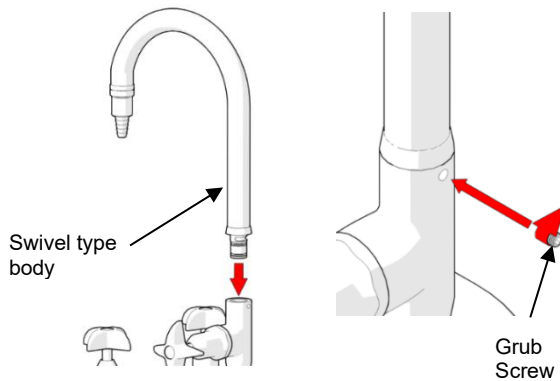

3. Insert Outlet (Swivel Body)

- If tap is swivel type, insert spout to the body and secure with grub screw.
- For fixed taps, outlet is already connected to the body.

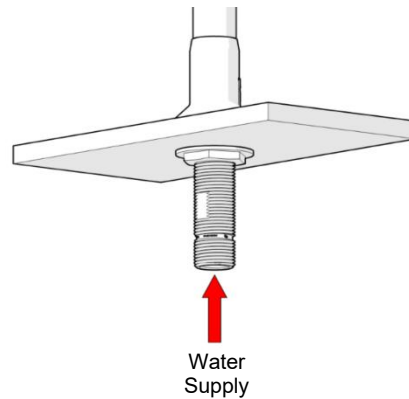


4. Connect the water line


- Connect water supply ensuring thread tape / sealant is used.

5. Testing

- Inspect the tap and check for any leaks.

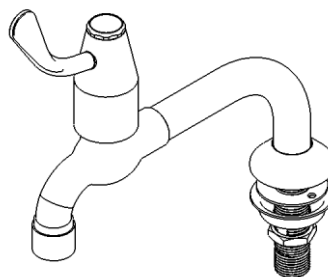


REPLACING FLOW REGULATOR (EXCEPT 167.26.32.00)

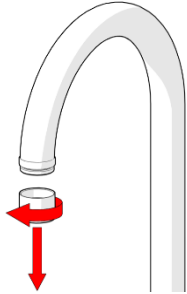

1. Remove Aerator Housing





- Turn housing to loosen and to remove as shown. For vandal-resistant type, use supplied tool to remove housing.

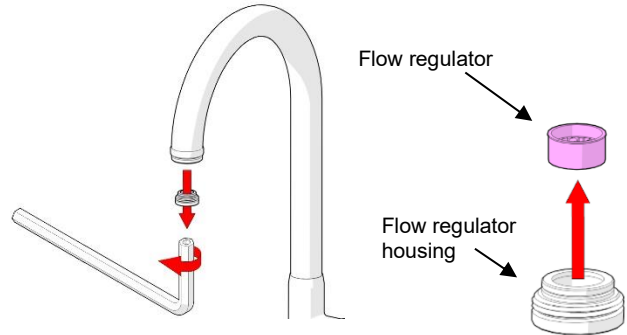

2. Remove & Swap

- Using a hex key, remove the secondary housing from the gooseneck.
- Push out the flow regulator from the housing.
- Fit the supplied alternative flow regulator.

Note: Not all items have supplied alternative flow regulators. If required, please contact Galvin Engineering.

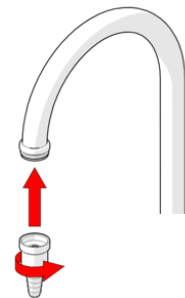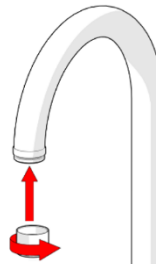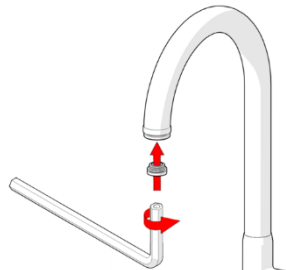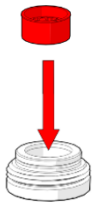

3. Reassemble


- Reverse steps 2 & 1 to reassemble ensuring correct orientation.
- Test for leaks and correct operation

REPLACING FLOW REGULATOR





1. Remove Aerator Housing

- Turn housing to loosen and to remove as shown.

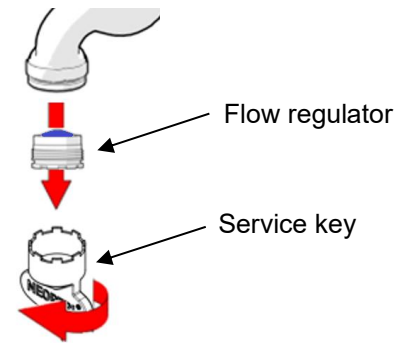

2. Remove & Swap

- Match the grooves of the service key with the aerator.
- Turn the key to loosen and to remove aerator.
- Fit the supplied alternative flow regulator.

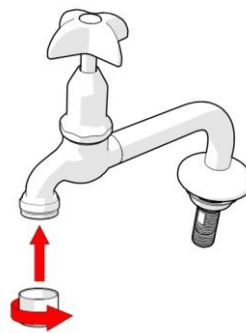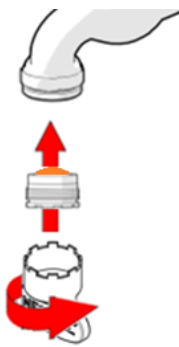

3. Reassemble

- Reverse steps 2 & 1 to reassemble ensuring correct orientation.
- Test for leaks and correct operation

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Water is not flowing or inconsistent flow	Blocked tube nozzle	Remove tube nozzle from outlet and remove debris. Install an inline strainer to stop further blockages
	Flow regulators may be blocked	Remove flow regulators from inlet and remove debris
	Mains supply is turned off	Turn on mains supply

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.