

## Product Installation Guidelines

Version 2.2, 11 March 2025, Page 1 of 4

# GalvinLab CP-BS Lead Safe Lab Wall Mounted Outlet Base 15BSP Female



## PRODUCT CODES

- 167.90.01.00

## SPECIFICATIONS

- Chrome plate finish for easy cleaning and added durability
- Lead Safe™ brass construction\*

**IMPORTANT:** All GalvinLab outlets are tested in accordance with AS 3718 and leave our premises in good working order.

\*Our Lead Safe™ product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

\*\*Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

**WARNINGS:** Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.




## TECHNICAL DATA

Inlet		½" BSP - Female
Outlet		Spout Connection
Headwork		N/A
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	80
Nominal Flow Rate (LPM)		N/A
Construction		Brass
Finish		Chrome
<b>NOTE:</b> Galvin Engineering continually strive to improve their products. Specifications may change without notice.		

## TOOLS REQUIRED


- Spanner or adjustable crescent
- Hex key
- Thread tape

## DIMENSIONS

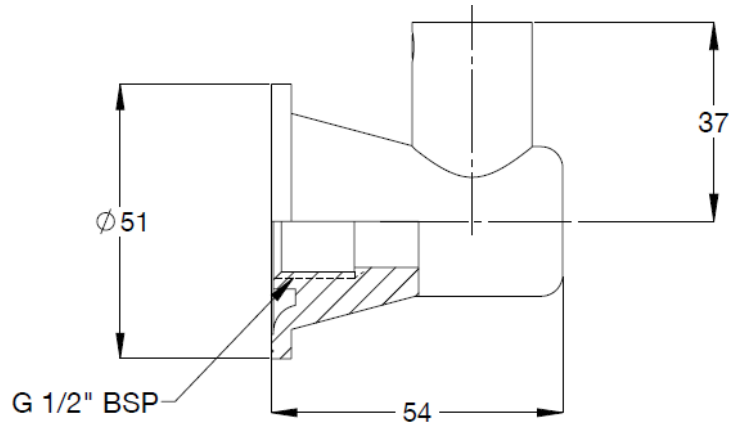


## INSTALLATION

**INSTALLATION COMPLIANCE:** Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

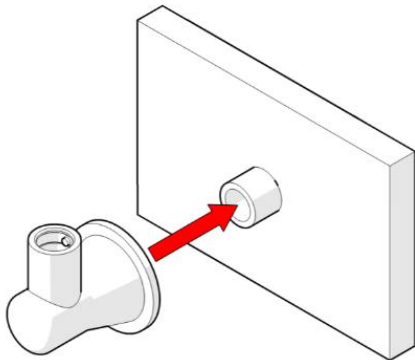


### 1. Fit Outlet Base

- Fit outlet base to the wall spud
- Thread tape should be used before fitting the Assembly

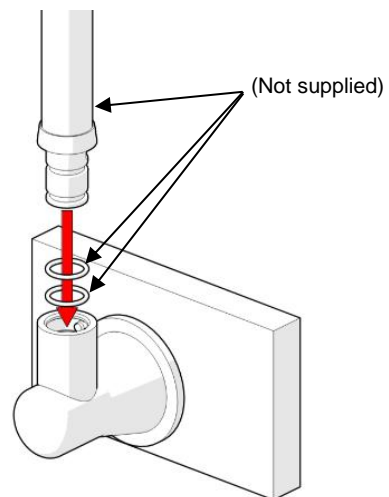


### 2. Fit Spout

- Grease spout o-rings and fit the spout (not supplied)

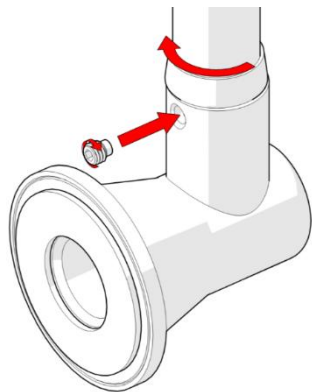

**3. Fit grub screw**

- Tighten grub screw using a hex key to secure the spout (not supplied)

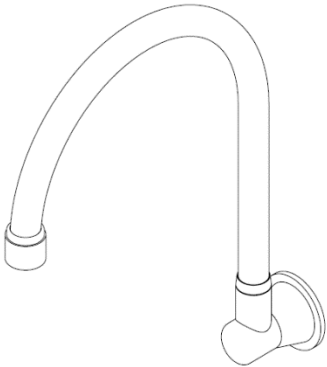

**4. Testing**

- Turn on water supply and test for leaks and correct operation

**TROUBLESHOOTING**

PROBLEM	CAUSE	RECTIFICATION
Water is not flowing from tap	Water supply is turned of	Turn on water supply
	Obstruction on spout	Check if ther are obstructions hindering the water flow in the spout and take it out
Assembly is leaking	Thread tape not used when the assembly was installed	Repeat Installation steps ensuring thread tape is used to seal the assembly

## WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit [www.galvinengineering.com.au](http://www.galvinengineering.com.au) to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: **1300 514 074** Outside Australia: P: **+61 (0)8 9338 2344**

F: **+61 (0)8 9338 2340**

[sales@galvinengineering.com.au](mailto:sales@galvinengineering.com.au)

[www.galvinengineering.com.au](http://www.galvinengineering.com.au)

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

