


Ezy-Wash[®] SS Lead Safe[™] Slophopper Hose /Spring Assembly w/ Heavy Duty Hand Trigger Spray

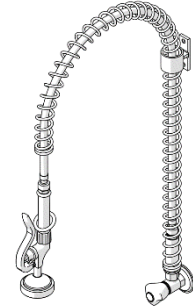

PRODUCT CODE:

- 181.93.02.00

SPECIFICATIONS

- Ergonomic Trigger hand spray
- Bright chrome plate finish for easy cleaning and added durability
- Australian Made; therefore, spare parts and support are available locally, reducing costs of down time on maintenance
- Lead Safe[™] brass construction*

IMPORTANT: All Ezy-Wash[®] items are tested in accordance with AS 3718 and leave our premises in good working order.

*Our Lead Safe[™] product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.
**Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.



TECHNICAL DATA

Inlet		G ½" - Female
Outlet		Trigger Spray
Headworks		Jumper Valve
Working Pressure Range (kPa)	Min	100
	Max	500
Working Temperature Range (°C)	Min	5
	Max	65
Nominal Flow Rate (LPM)		4.5
Finish		Chrome

NOTE: Galvin Engineering continually strives to improve their products. Specifications may change without notice. Higher temperature or pressures could result in premature failure and void the manufacturer's warranty.

TOOLS REQUIRED

- Adjustable Spanner
- Power Drill
- Hex key
- Thread tape / Sealant

PRE-INSTALLATION


Wall Spud

- This model is a single inlet unit requiring a single central wall spud. Spud must be 15 BSP MI and protrude from the finished wall by no more than 15mm.


Spring Support Bracket:

- Mark out the two (2) holes for mounting the wall bracket assembly at a height of between 470mm min - 560mm max. Drill as shown in the image. (Supplied fasteners may not be suitable for the mounting surface. If this is the case, suitable fasteners will need to be sourced by the installer).

⚠ Note: We recommend the wall bracket is installed within the range of 470min-560max. The wall bracket can be mounted lower. However, the further it is mounted away from the circlip, the more the stability of the unit is compromised.

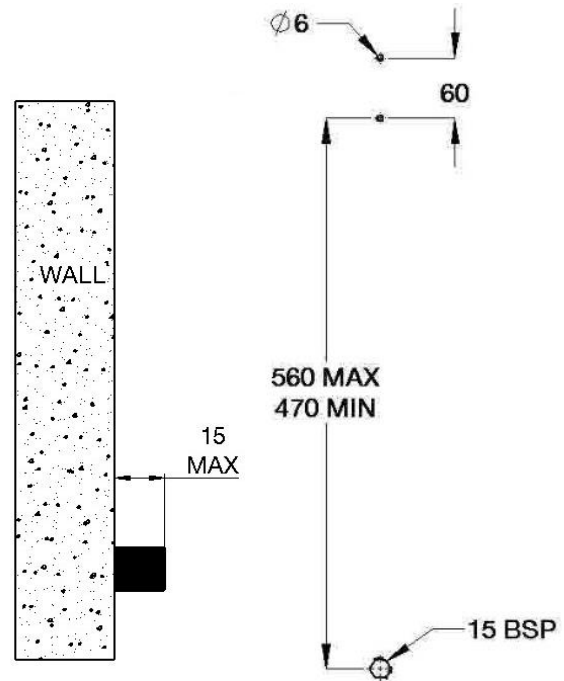


⚠ MOUNTING DETAILS

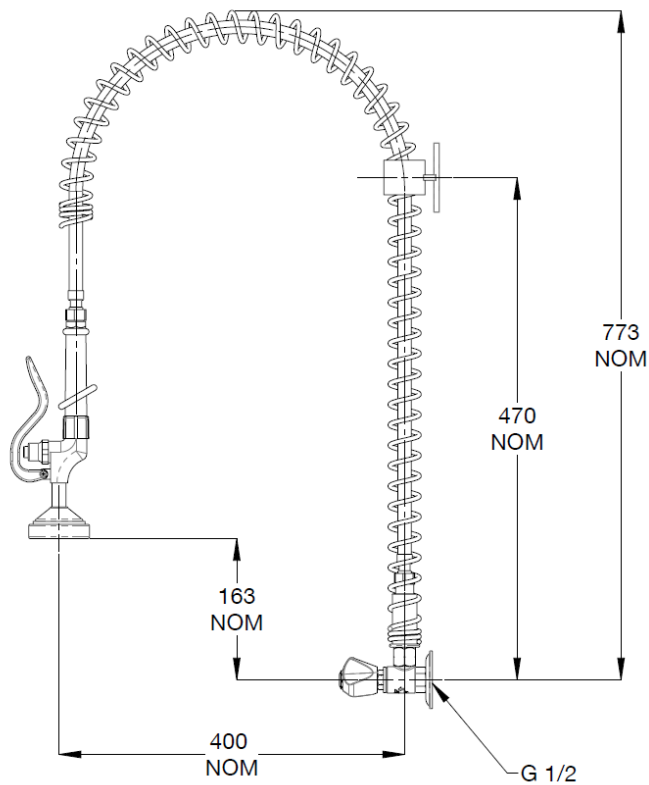

INSTALLATION


INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

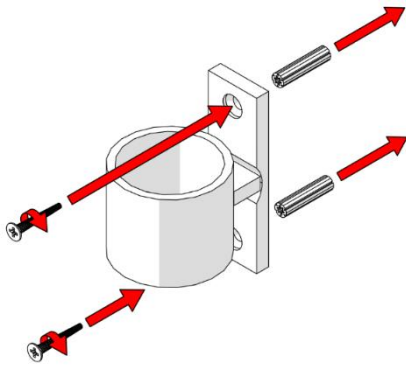

1. Fit support bracket


- Secure the support bracket to the wall.
- Supplied fasteners may not be suitable for the mounting surface. If this is the case, suitable fasteners will need to be sourced.

! Note: Stainless steel or chrome plated brass fasteners must be used to mount the spring support bracket. This is critical and failure to do this may void the warranty.

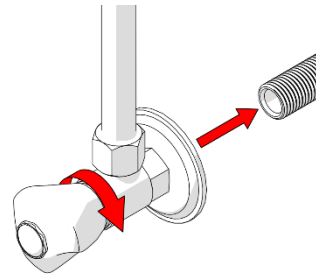

2. Fit isolation tap


- Fit the tap to wall spud. Use thread tape or equivalent to ensure the connection does not leak.

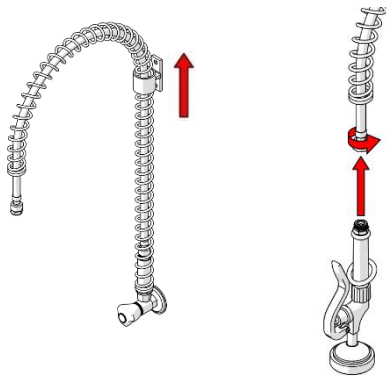

3. Fit the assembly

- Insert the hose into the support bracket as picture shown.
- Fit the trigger spray to the hose as picture shown.

! Note: Use the rubber washers supplied with trigger spary unit to seal hose.

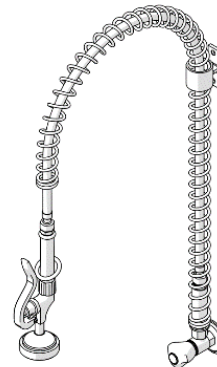

4. Test unit

- Once all fittings have been tightened securely, connect the unit to the mains water.
- Turn on water and test the unit for any leaks.

WARNINGS

⚠ For optimum performance it is recommended that the isolation or mains taps are turned off whilst the unit is not in use (overnight etc.), so that the unit is not under mains pressure when unsupervised. Flood damage may occur if a failure occurs whilst the unit is under mains pressure (warranty is void in this instance).

⚠ Galvin Engineering recommends that the handpiece is periodically serviced by a qualified plumber.

⚠ IMPORTANT:

To seal the hose this unit uses Loctite 577 which is a thread sealant approved for use with potable water (AS/NZS 4020). If hose is to be removed for maintainance purposes, reseal the joints with Loctite 577, or an equivalent sealant compliant with AS/NZS 4020. Do not use thread tape to seal the hose connections, as this may cause the hose nut to become loosened over time and leak.

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS/NZS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au

www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

